



# Assembly instructions

## Assembly packing list

### Width 600mm


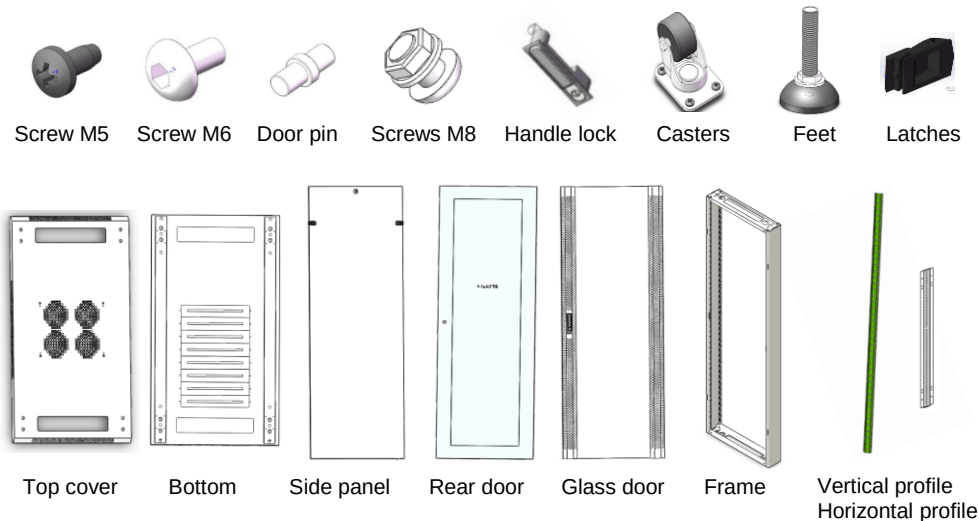


### Width 800mm


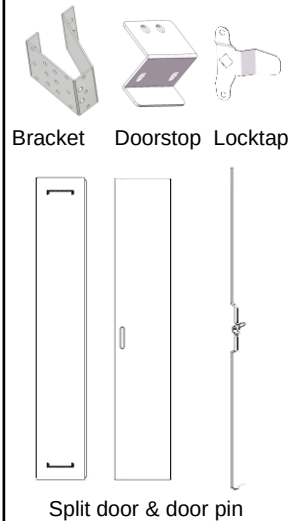


## Step 1: Fix the top cover and bottom on frames with M8 screw; Fix the casters.



### Top cover

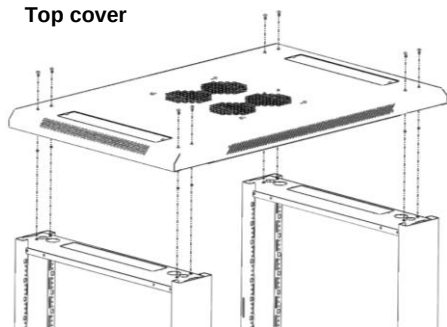


### Bottom

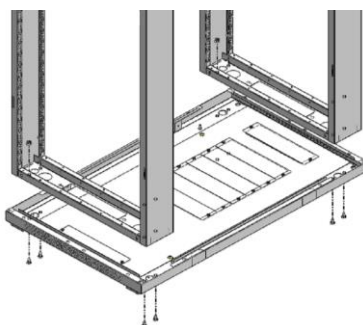


### Caster

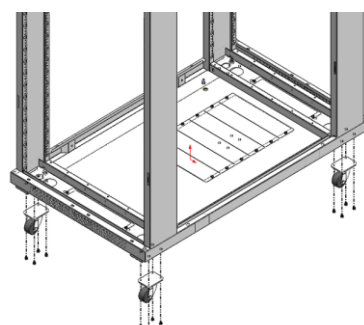


## Step 2: Fix the horizontal mounting rails with M5 screw;

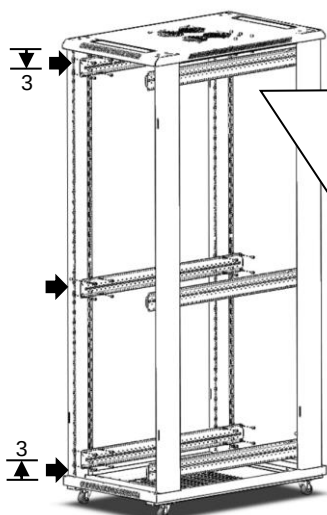

### Upper and bottom rails

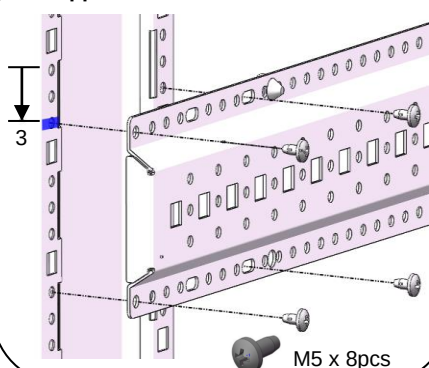

### Middle rail

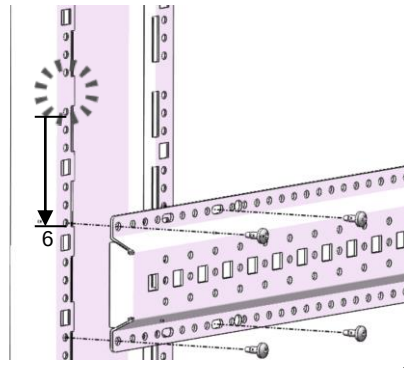


Fix upper and bottom mounting rails at the third round hole as picture, each with 8pcs M5 screws  
Fix the middle horizontal mounting rail at the sixth round hole from the location without square hole

# Assembly instructions


## Step 3: Fix the mounting profile with M5 screw; 800mm cabinet fixed the cube first.

Width 600mm cabinet

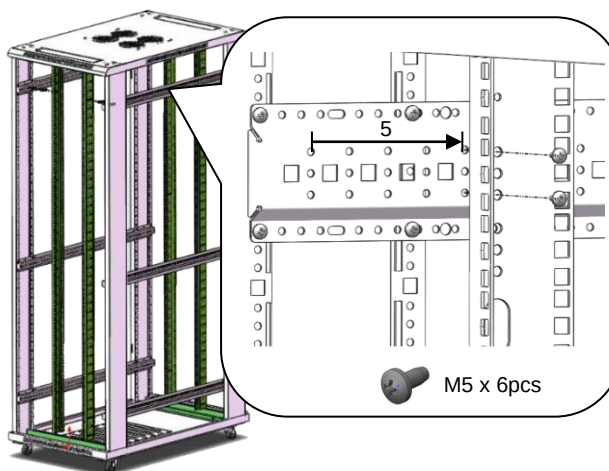



Fix 4 vertical mounting profiles on the mounting rails, each with 6pcs M5 screws.

Width 800mm cabinet

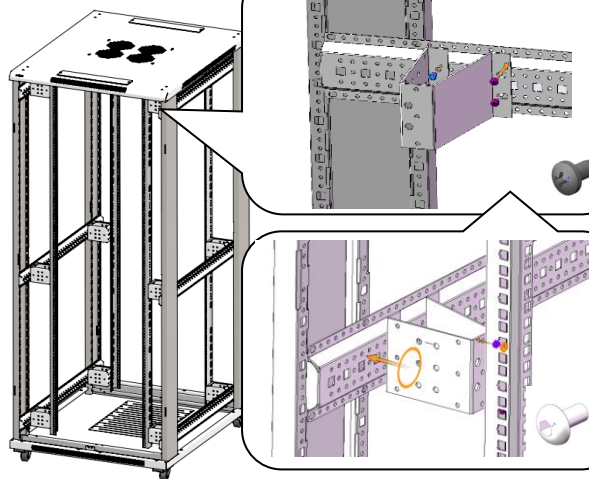


1. Fix bracket on the mounting rails, each with 4pcs M5 screws. Fix 4 vertical mounting profiles on the cubes, each with 3pcs M6 screws and nuts.

## Step 4: Fix doors and side panels ;

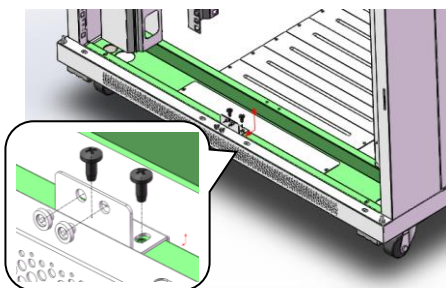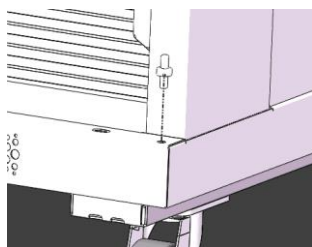


Fix front and back door pins, fix the doors and side panels.  
Split doors, please fix the doorstop on the top and bottom.

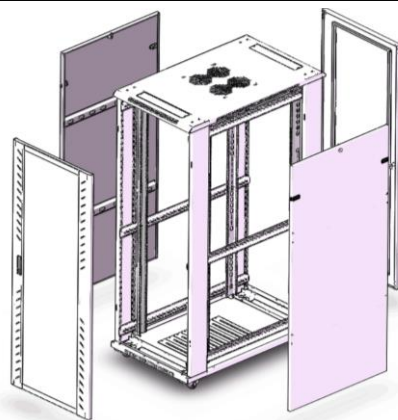


## Step 5: Fix the latch and lock on the door;

Side door

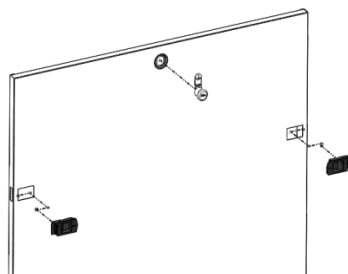


Fix handle latches on the side panel

Front door

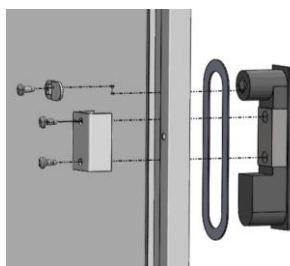

Fix handle lock on the doors

## Split doors

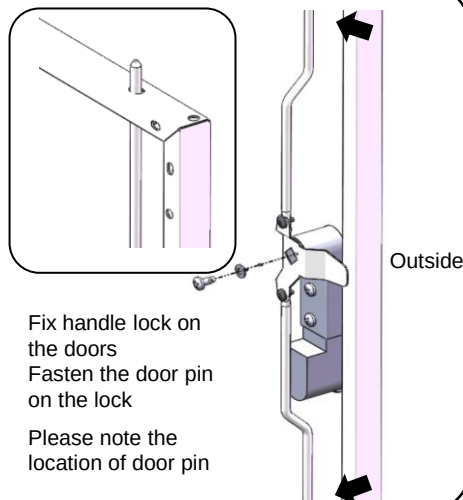

Complete! Thank you!