


RLC-410W-4MP-IP-Camera-Specifications		
	Model	RLC-410W-4MP
Video & Audio	Image Sensor	1/3" CMOS Sensor
	Video Resolution	Default: 2560 x 1440 (4MP)@30FPS
	Lens	f=4.0mm fixed, F=2.0, with IR cut
	Video Format	H.264
	Field of View	Horizontal: 80°
		Vertical: 42°
	Day & Night	IR-cut filter with auto-switching
	Night Vision	30 meters (100ft) (LED: 18pcs/14mil/850nm)
	Audio	Audio recording
Power	DC Power	DC 12.0V = 1A, <12W
Interface	Power	DC power port
	System	Reset button
	Ethernet	One 10M/100Mbps RJ45
	Storage	Micro SD card slot (Max. 256GB)
	Audio	Built-in microphone
Software Features	Frame Rate	Mainstream: 2fps - 30fps (default: 15fps)
		Substream: 4fps - 15fps (default: 7fps)
	Code Rate	Mainstream: 1024Kbps - 8192Kbps (default: 3072Kbps)
		Substream: 64Kbps - 512Kbps (default: 160Kbps)
	Browsers Supported	IE, Edge, Chrome, Firefox, Safari
	OS Supported	PC: Windows, Mac OS; Smartphone: iOS, Android
	Smart Alarm	Person detection/vehicle detection/motion detection
	Recording Modes	Motion recording (default); scheduled recording; 24/7 recording
	Protocols & Standards	HTTPS, SSL, TCP/IP, UDP, HTTP, IPv4, UPnP, RTSP, RTMP, SMTP, NTP, DHCP, DNS, DDNS, FTP, P2P
	Maximal User Access	20 users (1 admin account & 19 user accounts); Supports up to 12 simultaneous video streams (10 substreams & 2 mainstreams)
	Work with	Google Assistant


<b>WiFi</b>	Wireless Standard	IEEE 802.11a/b/g/n
	Operating Frequency	2.4GHz/5GHz
	Wireless Security	WPA-PSK/WPA2-PSK
<b>Working Environment</b>	Temperature	Operating Temperature: -10°C~+55°C (14°F~131°F)
	Humidity	Operating Humidity: 10% ~ 90%
	Waterproof	IP66
<b>Size &amp; Weight</b>	Dimension	Φ67 x 186mm
	Weight	430g
<b>Warranty</b>	Limited Warranty	2-year limited warranty. For support, visit <a href="https://support.reolink.com/hc/en-us/">https://support.reolink.com/hc/en-us/</a> .

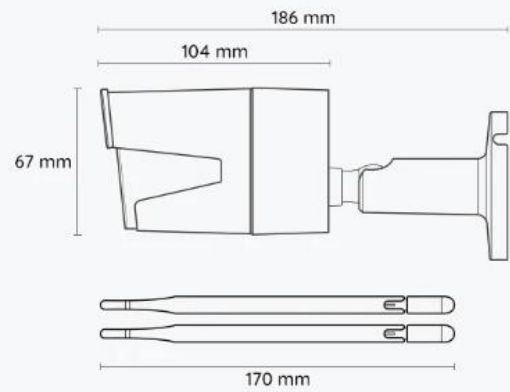

- ① Antenna
- ② Mount
- ③ Metal Aluminum Case
- ④ 18 IR LEDs
- ⑤ High Definition Lens (f=4.0mm)
- ⑥ Daylight Sensor

## RLC-410W-4MP

- ① Micro SD Card Slot

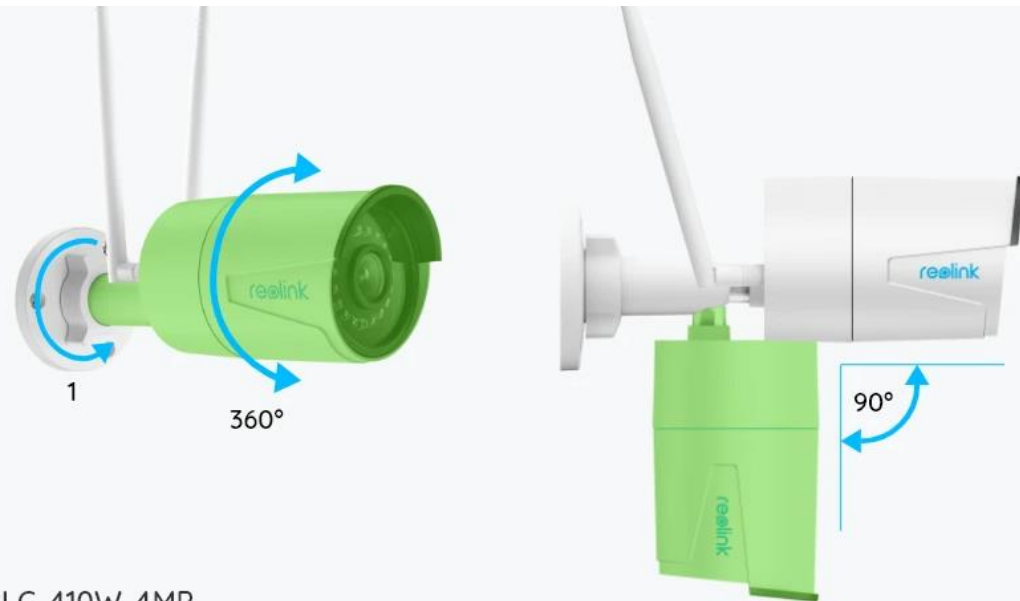

## RLC-410W-4MP

1. Unscrew it (counterclockwise) to loosen the bracket and adjust the camera in any direction.
2. After adjustment, twist it back to fix the camera.



- ① Power
- ② Reset Button
- ③ Network
- ④ Waterproof Lid